

Head Office



1021 College Road
Truro, Nova Scotia B2N 5B2
Phone: 902.897.9663
Fax: 902.895.3848
Toll free: 800.419.1021



**Canada's Largest
Moulding Showroom**

Burnside Industrial Park
71 Ilsley Avenue
Phone: 902.468.1707
Dartmouth, Nova Scotia

Instructions for Attaching Handrails to Fibreglass Reinforced Columns

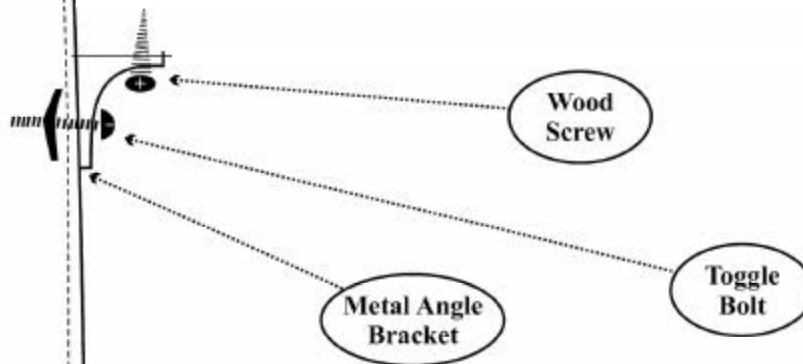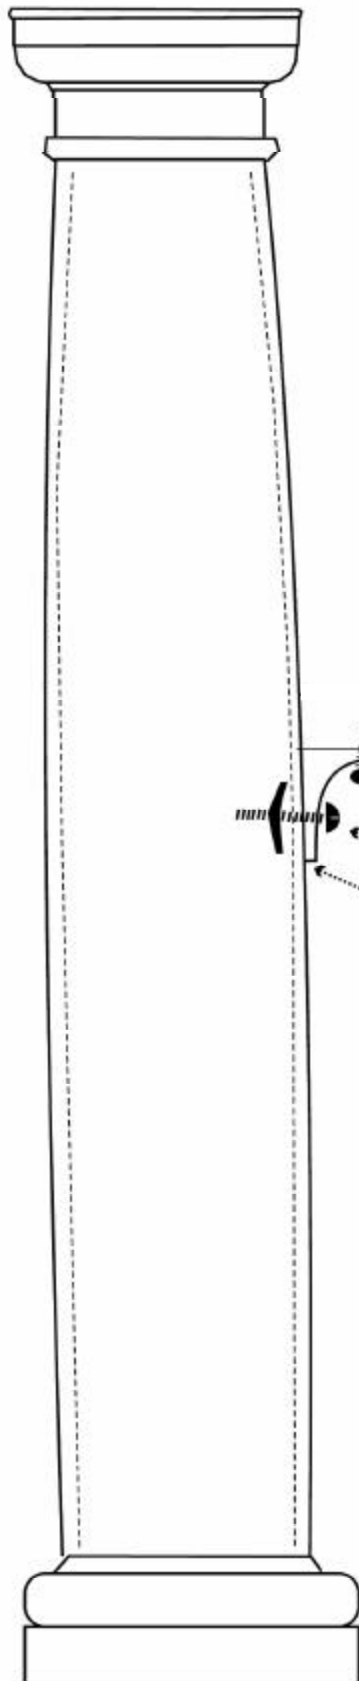

- 1) Trace the curve of the column at the desired rail height.
- 2) Copy the curve to the end of the rail which will be attached to the column.
- 3) Carefully cut the end of the rail to ensure an attractive, tight fit.
- 4) Attach metal angle bracket to the bottom of railing using rust proof wood screws.
- 5) Mark desired spot on column shaft.
- 6) Drill pilot hole in wall of column, slightly larger than toggle bolt.
- 7) Attach angle bracket to column wall with toggle bolt. The toggle bolt will spread any force applied over a wide area of the inside of the column. **DO NOT OVER TIGHTEN!**